

USER QUICK GUIDE

POST DRIVER



WEAR PROTECTIVE EQUIPMENT WHEN OPERATING THIS MACHINE

- With the machine in vertical position, test fuel level.
- With the machine in vertical position, test oil level.
- Pump fuel with the small rubber dome watching fuel entering the carburettor.
- Close choke, especially in cold starts.
- Check the starter button is in the "ON" position.
- Grab the pull cord of the Honda GX35 engine, then firmly pull until the engine starts.
- Let the engine run for one minute, until optimal temperature is reached.
- NEVER press throttle before inserting a post in the machine.
- Set the machine centred, facing downwards and with the post inserted.
- Grab both handles then slightly press the machine downwards.
- Push the throttle button until the piston strikes the post.
- When the posts reach the desired depth, release the throttle.
- Lift the machine out of the post, then go to the next post(rep.from step 8).
- Don't modify the throttle RPMs setting, increasing RPMs may lead to Post Driver malfunction and structural damage.



4 STROKE ENGINE - DO NOT MIX WITH FUEL

DO NOT PRESS THE THROTTLE WITHOUT A POST IN THE NOZZLE

DURING STRIKE DO NOT LET NOZZLE TOUCH THE GROUND